

Ear mould & tubing attachment


Step 1

Detach your earmould from the transparent hook part of the hearing aid. Clean and dry your earmould to remove any dirt and grease.



Step 2

Use the old tube removed in step 2 to measure the length of the new tube and cut where appropriate. Reattach to the hearing aid.

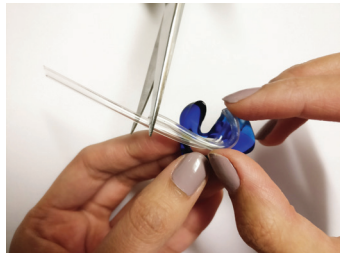

At the end

Your mould reattached to the hearing aid should look like this.

